

Условное обозначение:

B16/3	Exhaust gas temperature sensor
B16/3x1	Exhaust gas temperature sensor connector
F4	Rear fuse box
F4f6	Fuse 6
G3/2	02 sensor upstream of TWC [KAT]
G3/2x1	02 sensor upstream of TWC [KAT] connector
K27	Fuel pump relay
K40/2	Driver-side fuse and relay module
K40/4	Passenger-side fuse and relay module
K40/4	Passenger-side fuse and relay module
K40/4f1	Circuit 30z fuse
K40/4f4	Fuse 2, Motronic
K40/4f6	Ignition coil fuse
K40/4k1	Reverse polarity protection relay
K40/4k2	Starter relay
M1	Starter
M2/2	control unit box blower motor
M3	Fuel pump (FP)
N10/1	Driver-side signal acquisition and actuation module (SAM)
N15/3	ETC [EGS] control unit
N3/4	HFM-SFI [HFM] control unit
N3/4	HFM-SFI [HFM] control unit
N3/4	HFM-SFI [HFM] control unit
N3/4	HFM-SFI [HFM] control unit
N47-1	ASR/SPS [PML] control unit
N47-1	ASR/SPS [PML] control unit
N47-2	ETS/SPS [PML] control unit
N47-2	ETS/SPS [PML] control unit
N47-5	ESP, SPS [PML] and BAS control unit
N73	EIS [Ezs] control unit
N73	EIS [Ezs] control unit
N73	EIS [Ezs] control unit
S40/3	Clutch pedal switch
S40/4	CC [TPM] with variable speed limiter switch
S40/4s1	Resume from memory
S40/4s2	Decelerate and set
S40/4s3	Accelerate and set
S40/4s4	Off
S40/4s5	Control contact

Позиция:

27 L
27 K
20 L
20 K
29 L
28 K
21 L
30 E
10 L
11 L
11 L
12 L
9 L
15 L
7 L
6 L
18 L
23 L
31 F
26 L
4 A
12 A
21 A
29 A
36 A
36 A
37 A
37 A
37 A
32 L
42 L
46 L
24 L
45 A
45 C
45 C
45 C
45 B
45 B

Условное обозначение:

S40/4s6	Variable speed
S40/4x1	Variable cruise control switch connector
S9/1	Stop lamp switch
U12	Valid for left-hand drive vehicles
U12	Valid for left-hand drive vehicles
U12	Valid for left-hand drive vehicles
U12	Valid for left-hand drive vehicles
U13	Valid for right-hand drive vehicles
U13	Valid for right-hand drive vehicles
U13	Valid for right-hand drive vehicles
U13	Valid for right-hand drive vehicles
U13	Valid for right-hand drive vehicles
U24	Valid for manual transmission
U25	Valid for automatic transmission
U3	Valid for electronic traction system (ETS)
U3	Valid for electronic traction system (ETS)
U507	Valid for ESP
U8	Valid for ASR
U8	Valid for ASR
W16/3	Power ground (left wheelhouse)
W16/3	Power ground (left wheelhouse)
W16/3	Power ground (left wheelhouse)
W16/4	Power ground (right wheelhouse)
W16/4	Power ground (right wheelhouse)
W16/4	Power ground (right wheelhouse)
W16/5	Electronics ground (left of component compartment)
W16/5	Electronics ground (left of component compartment)
W16/6	Electronics ground (right of component compartment)
W16/6	Electronics ground (right of component compartment)
W18	Ground (left front seat crossmember)
X11/4	Data link connector
X25/7	Engine compartment/FFS [RBA] connector
X25/7	Engine compartment/FFS [RBA] connector
X63/6	CAN databus/15u connector
Y58/1	Purge control valve
Z3/29	Circuit 15 connector sleeve (fused)
Z37/13	CAN engine bus (low) connector sleeve
Z37/14	CAN engine bus (high) connector sleeve
Z37/2	CAN engine bus (low) connector sleeve

Позиция:

46 C
42 E
39 A
3 D
6 D
12 H
21 E
3 D
6 D
11 H
21 E
27 A
24 F
25 F
35 A
35 A
35 A
35 A
35 A
11 E
21 C
24 G
11 E
21 C
29 G
3 E
6 E
2 E
5 E
23 G
4 L
15 G
33 E
40 E
1 L
9 G
40 G
41 G
34 G

Условное обозначение:

Z37/3	CAN engine bus (high) connector sleeve
Z7/25	Circuit 87 (unfused) connector sleeve (HFM-SFI [HFM]/base module)
Z7/38	Circuit 87 M1i connector sleeve
Z7/39	Circuit 87 M2i connector sleeve
Z7/39	Circuit 87 M2i connector sleeve
Z8/3	ETC [EGS] starter lockout connector sleeve

Позиция:

33 G
13 E
7 G
3 G
14 E
25 G





