


MODEL 170, 202, 208, 210

- 31 Screws
- 32 Bracket
- 33 Casing tube cover
- S4 Combination switch
- S40 Cruise control switch
- S4x1 Connector, combination switch
- S40x1 Connector, cruise control switch (CC)

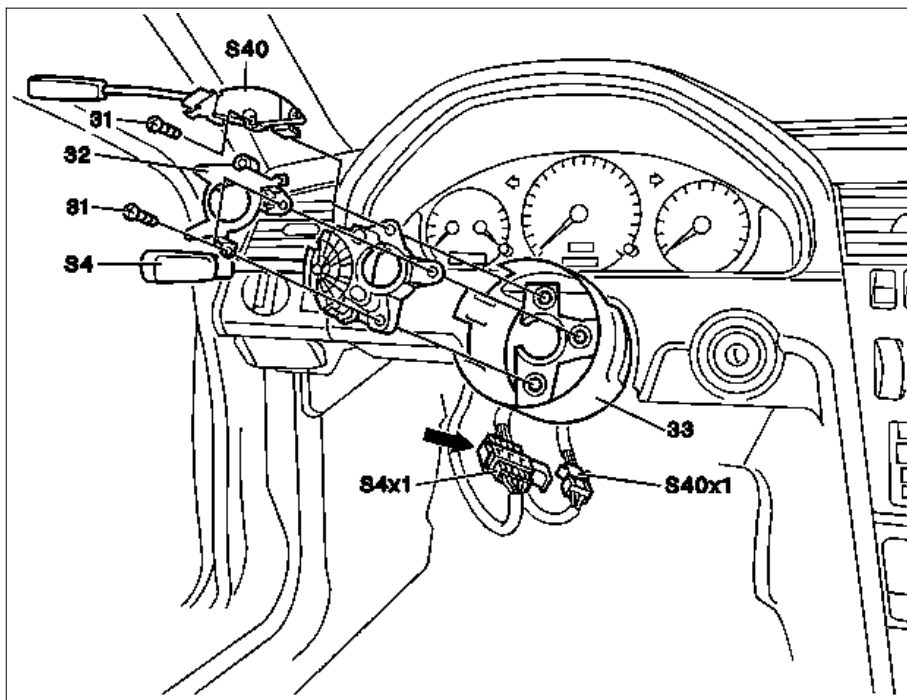

P54.25-0001-06

| <div> <div></div> <div></div> </div> | | Removal, installation | |
|--------------------------------------|--|---|---|
| 1 | Disconnect ground cable at the battery | ⓘ On model 210 insulate terminal on ground cable to prevent unintentional contact between disconnected ground cable and ground W10. | AR54.10-P-0003A |
| 2 | Remove steering wheel | ⓘ Caution when handling airbag unit. Improper handling may cause damage to the airbag unit | AR46.10-P-0100B |
| 3 | Remove contact spiral | | AR46.10-P-0200A |
| 4.1 | Remove cover below instrument panel (driver's side) | Model 170 Model 202 Model 210 | AR68.10-P-1500G AR68.10-P-1500E AR68.10-P-1500F |
| 4.2 | Remove bottom section of instrument panel (driver's side) | Model 208 | AR68.10-P-1505K |
| 5 | Unscrew screw (31) | | |
| 6 | Take out bracket (32) | | |
| 7 | Separate connector (S4x1) | Take connector out of fixture and push bar (arrow) | |
| 8 | Separate connector (S40x1) | Cruise control (code 440a) Take connector out of fixture | |
| 9 | Detach wiring | | |
| 10.1 | Take out casing tube cover (33) together with combination switch (S4) | without cruise control | |
| 10.2 | Take out casing tube cover (33) with combination switch (S4) and cruise control switch (S40) | with cruise control (code 440a) | |
| 11.1 | Take combination switch (S4) out of casing tube cover | without cruise control | |
| 11.2 | Take combination switch (S4) and cruise control switch (S40) out of casing tube cover | with cruise control (code 440a) | |
| 12 | Reinstall in opposite order | | |