

Условное обозначение:

A1	Instrument cluster
A1e17	ABS indicator lamp
A1e35	ETS indicator lamp
A1e36	ETS warning lamp
A1e7	Brake fluid and parking brake warning lamp
A7/3	Traction system hydraulic unit
A7/3m1	High pressure and return pump
A7/3y10	Left rear solenoid valve (pressure hold)
A7/3y11	Left rear solenoid valve (pressure release)
A7/3y12	Right rear solenoid valve (pressure hold)
A7/3y13	Right rear solenoid valve (pressure release)
A7/3y15	Inlet solenoid valve
A7/3y5	Switchover solenoid valve
A7/3y6	Left front solenoid valve (pressure hold)
A7/3y7	Left front solenoid valve (pressure release)
A7/3y8	Right front solenoid valve (pressure hold)
A7/3y9	Right front solenoid valve (pressure release)
G1	Battery
K40	Relay module
K40f1	Traction system fuse
K40k5	Electronic traction system relay
L6/1	Left front rpm sensor
L6/2	Right front rpm sensor
L6/3	Left rear rpm sensor
L6/4	right rear rpm sensor
N47-2	ETS/SPS [PML] control unit
N47-2	ETS/SPS [PML] control unit
N47-2	ETS/SPS [PML] control unit
N47-2	ETS/SPS [PML] control unit
N47-2	ETS/SPS [PML] control unit
N65	Cycle module (traction systems, HCS, ATA, AAC [SRA, EDW, KLA])
N65k3	Solenoid valve relay
N65k4	High pressure/return pump relay
N7-1	Light module
N7-1	Light module
S9/1	Stop lamp switch
S9/1	Stop lamp switch
S9/1	Stop lamp switch
U12	Valid for left-hand drive vehicles

Позиция:

20 L
21 L
20 L
18 L
22 L
4 L
6 L
3 J
4 J
3 H
4 H
3 H
4 H
3 K
4 K
3 J
4 J
37 A
37 L
37 J
37 L
12 L
14 L
31 L
30 L
4 A
12 A
20 A
28 A
36 A
9 L
9 L
8 L
17 L
24 L
15 L
33 L
34 L
16 H

Условное обозначение:

U12	Valid for left-hand drive vehicles	19 C
U13	Valid for right-hand drive vehicles	16 H
U13	Valid for right-hand drive vehicles	19 C
U77	Valid for speed-sensitive power steering (SPS [PML])	11 A
U85	Valid for ETS/AT [AG]	33 A
U9	Valid for ETS/MT [MG]	32 A
W15/1	Ground (right footwell)	19 E
W15/2	Ground (left footwell)	19 E
W16/3	Power ground (left wheelhouse)	7 E
X11/4	Data link connector	28 G
X12/5	Terminal block, circuit 15/15R (frame-floor system)	37 E
X21/1	Stop lamp switch terminal block	14 E
X25	Engine compartment/FFS [RBA] connector (diagnosis)	28 E
X26/1	Cockpit and engine compartment connector, circuit 61e	22 E
X4	Terminal block (circuit 30, left footwell)	10 E
X62/1	Left rear rpm sensor/brake wear indicator connector	30 G
X62/19	Terminal block (left front traction system VSS [GES] sensor)	21 E
X62/2	Right rear rpm sensor/brake wear indicator connector	29 G
X62/21	Terminal block (left rear traction system VSS [GES] sensor)	26 E
X62/6	Right front axle multiple circuit junction connector, major assembly compartment	13 G
X62/7	Left front axle multiple circuit junction connector, major assembly compartment	12 G
Y10	SPS [PML] solenoid valve	11 L
Z40	Stop lamp signal connector sleeve	34 E
Z41	CC [TPM] shut-off connector sleeve (wheel spin signal)	25 E
Z99/1	Circuit 87 connector sleeve (ASR/ETS)	32 E
Z99/1	Circuit 87 connector sleeve (ASR/ETS)	34 E
Z99/1	Circuit 87 connector sleeve (ASR/ETS)	35 E

Позиция:





