

Условное обозначение:

Позиция:

A16	Knock sensors	21 L
B11/4	Coolant temperature sensor	13 L
B16/3	Exhaust gas temperature sensor	35 L
B16/3x1	Exhaust gas temperature sensor connector	34 K
B2/5	Hot film mass air flow sensor	15 L
B6/1	Camshaft Hall sensor	17 L
F1	Fuse and relay box	8 L
F1	Fuse and relay box	38 L
F1f15	Fuse 15	38 K
F1f17	Fuse 17	38 K
F1f19	Fuse 19	8 K
G1	Battery	41 L
G3/2	02 sensor upstream of TWC [KAT]	48 L
G3/2x1	02 sensor upstream of TWC [KAT] connector	47 K
K40	Relay module	44 L
K40f5	FP fuse	44 J
K40k1	Fuel pump relay	43 L
K40k2	Circuit 87 engine relay, unfused	45 L
K40k7	Oil cooler fan relay	46 L
L5	Crankshaft position sensor	12 L
M16/6	Throttle valve actuator	24 L
M16/6	Throttle valve actuator	27 L
M16/6m1	Actuator motor	23 K
M16/6m1	Actuator motor	26 K
M16/6r1	Throttle valve actual value potentiometer	24 K
M16/6r1	Throttle valve actual value potentiometer	27 K
M16/6r2	Drive actual value potentiometer	24 K
M16/6r2	Drive actual value potentiometer	27 K
M3	Fuel pump (FP)	42 L
N3/4	HFM-SFI [HFM] control unit	3 A
N3/4	HFM-SFI [HFM] control unit	12 A
N3/4	HFM-SFI [HFM] control unit	20 A
N3/4	HFM-SFI [HFM] control unit	28 A
N3/4	HFM-SFI [HFM] control unit	36 A
N3/4	HFM-SFI [HFM] control unit	44 A
N3/4	HFM-SFI [HFM] control unit	50 A
N76	Engine and air conditioning electric suction fan control unit	32 L
R4	Spark plugs	9 L
R4	Spark plugs	10 L

Условное обозначение:

Позиция:

R4	Spark plugs	11 L
R4	Spark plugs	11 L
S2	Starter switch	33 L
S40	CC [TPM] switch	30 L
S40s1	Resume from memory	30 J
S40s2	Decelerate and set	30 K
S40s3	Accelerate and set	30 K
S40s4	Off	30 K
S40s5	Control contact	30 L
S40x1	CC [TPM] switch connector	29 J
S43	Oil level check switch	22 L
T1/1	Cylinder 1 ignition coil	9 K
T1/2	Cylinder 2 ignition coil	10 K
U12	Valid for left-hand drive vehicles	38 D
U12	Valid for left-hand drive vehicles	39 D
U12	Valid for left-hand drive vehicles	43 G
U13	Valid for right-hand drive vehicles	39 D
U13	Valid for right-hand drive vehicles	40 D
U13	Valid for right-hand drive vehicles	44 G
U24	Valid for manual transmission	23 A
U25	Valid for automatic transmission	26 A
U52	Valid for Japan	35 A
W15/1	Ground (right footwell)	43 F
W15/2	Ground (left footwell)	43 E
W16/4	Power ground (right wheelhouse)	48 H
W16/5	Electronics ground (left of component compartment)	38 D
W16/5	Electronics ground (left of component compartment)	39 D
W16/6	Electronics ground (right of component compartment)	19 H
W16/6	Electronics ground (right of component compartment)	38 E
W16/6	Electronics ground (right of component compartment)	39 E
W18	Ground (left front seat crossmember)	42 H
X11/4	Data link connector	40 L
X12/5	Terminal block, circuit 15/15R (frame-floor system)	6 L
X22	Engine compartment and engine connector	6 E
X22	Engine compartment and engine connector	20 H
X25/7	Engine compartment/FFS [RBA] connector	49 E
X26	Cockpit and interior connector	33 E
X4	Terminal block (circuit 30, left footwell)	33 H
X85/1	AC wiring harness and engine wiring harness connector	32 E

Номер документа: 07.11ap-2000-99d

Название документа: 07.11ap-2000-99d sequential multiport fuel injection/ ignition system

Условное обозначение:

Y49	Adjustable camshaft timing solenoid
Y58/1	Purge control valve
Y62	Fuel injection valves
Y62y1	Cylinder 1 fuel injection valve
Y62y2	Cylinder 2 fuel injection valve
Y62y3	Cylinder 3 fuel injection valve
Y62y4	Cylinder 4 fuel injection valve
Z3/26	Circuit 15 connector sleeve (unfused)
Z3/29	Circuit 15 connector sleeve (fused)
Z3/29	Circuit 15 connector sleeve (fused)
Z3/29	Circuit 15 connector sleeve (fused)
Z3/29	Circuit 15 connector sleeve (fused)
Z37/2	CAN engine bus (low) connector sleeve
Z37/3	CAN engine bus (high) connector sleeve
Z7/5	Circuit 87 connector sleeve
Z83/6	Shielding connector sleeve

Позиция:

20 L
36 L
3 L
2 L
3 L
4 L
5 L
4 H
9 H
19 E
29 E
37 E
49 H
50 H
16 H
18 E





