

Условное обозначение:

A1	Instrument cluster	
A1e17	ABS indicator lamp	
A1e35	ETS indicator lamp	
A1e36	ETS warning lamp	
A1e6	Brake pad wear indicator lamp	
A1e7	Brake fluid and parking brake warning lamp	
A7/3	Traction system hydraulic unit	
A7/3m1	High pressure and return pump	
A7/3y10	Left rear solenoid valve (pressure hold)	
A7/3y11	Left rear solenoid valve (pressure release)	
A7/3y12	Right rear solenoid valve (pressure hold)	
A7/3y13	Right rear solenoid valve (pressure release)	
A7/3y15	Inlet solenoid valve	
A7/3y5	Switchover solenoid valve	
A7/3y6	Left front solenoid valve (pressure hold)	
A7/3y7	Left front solenoid valve (pressure release)	
A7/3y8	Right front solenoid valve (pressure hold)	
A7/3y9	Right front solenoid valve (pressure release)	
G1	Battery	
K40	Relay module	
K40f1	Traction system fuse	
K40k5	Electronic traction system relay	
L6/1	Left front rpm sensor	
L6/2	Right front rpm sensor	
L6/3	Left rear rpm sensor	
L6/3x1	Rpm sensor connector	
L6/4	right rear rpm sensor	
N47-2	ETS/SPS [PML] control unit	
N47-2	ETS/SPS [PML] control unit	
N47-2	ETS/SPS [PML] control unit	
N47-2	ETS/SPS [PML] control unit	
N47-2	ETS/SPS [PML] control unit	
N65	Cycle module (traction systems, HCS, ATA, AAC [SRA, EDW, KLA])	
N65k4	High pressure/return pump relay	
N7-1	Light module	
S10/1	Left front brake pad contact sensor	
S10/2	Right front brake pad contact sensor	
S10/4	Right rear brake pad contact sensor	
S12	Parking brake indicator switch	

Позиция:

35 A
37 A
38 A
39 A
36 A
37 A
4 L
6 L
3 J
4 J
3 H
4 H
3 H
4 H
3 K
4 K
3 J
4 J
27 L
25 L
25 J
25 L
13 L
15 L
19 L
18 J
17 L
4 A
12 A
20 A
28 A
33 A
9 L
8 L
31 L
14 L
16 L
18 L
32 L

Условное обозначение:

S9/1	Stop lamp switch	
U12	Valid for left-hand drive vehicles	
U12	Valid for left-hand drive vehicles	
U12	Valid for left-hand drive vehicles	
U13	Valid for right-hand drive vehicles	
U13	Valid for right-hand drive vehicles	
U13	Valid for right-hand drive vehicles	
U77	Valid for speed-sensitive power steering (SPS [PML])	
W1	Main ground (behind instrument cluster)	
W16/3	Power ground (left wheelhouse)	
W16/3	Power ground (left wheelhouse)	
W16/4	Power ground (right wheelhouse)	
X11/4	Data link connector	
X12/3	Terminal block (circuit 30)	
X12/5	Terminal block, circuit 15/15R (frame-floor system)	
X21/1	Stop lamp switch terminal block	
X25	Engine compartment/FFS [RBA] connector (diagnosis)	
X4	Terminal block (circuit 30, left footwell)	
X62/19	Terminal block (left front traction system VSS [GES] sensor)	
X62/2	Right rear rpm sensor/brake wear indicator connector	
X62/21	Terminal block (left rear traction system VSS [GES] sensor)	
X62/6	Right front axle multiple circuit junction connector, major assembly compartment	
X62/7	Left front axle multiple circuit junction connector, major assembly compartment	
X63/6	CAN databus/15u connector	
Y10	SPS [PML] solenoid valve	
Z37/13	CAN engine bus (low) connector sleeve	
Z37/14	CAN engine bus (high) connector sleeve	
Z37/2	CAN engine bus (low) connector sleeve	
Z37/3	CAN engine bus (high) connector sleeve	
Z89	Right front axle VSS [GES] sensor connector sleeve (feed from ABS - N30 or ASR - N30/1, N47-1, ETS-N47-2 control unit)	
Z99/1	Circuit 87 connector sleeve (ASR/ETS)	

Позиция:

29 L
9 D
10 D
30 H
10 D
10 D
30 H
11 A
33 E
7 E
9 E
10 E
23 G
6 E
24 E
28 E
23 E
9 G
20 E
16 G
22 E
14 G
12 G
34 F
11 L
34 E
35 E
34 H
35 H
21 E
25 E





